

Quick Start Guide TouchControl 5

 Dante®

 **RAVENNA**
AES67 & ST 2110 built-in





Read Before Unpacking!
Vor dem Auspacken lesen!





Full
Documentation




RTW
EYES ON YOUR AUDIO

Unpacking | Auspacken

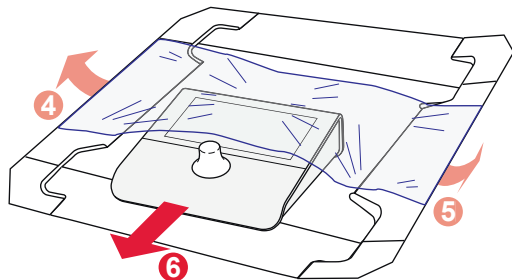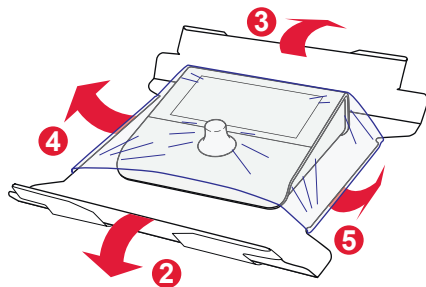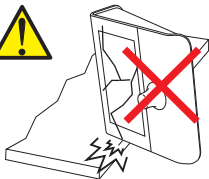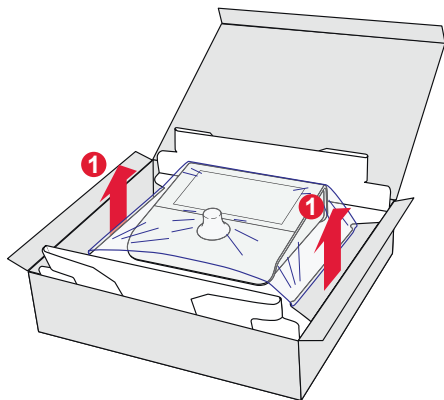

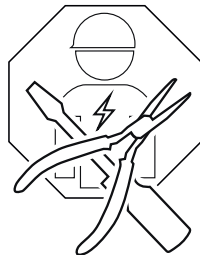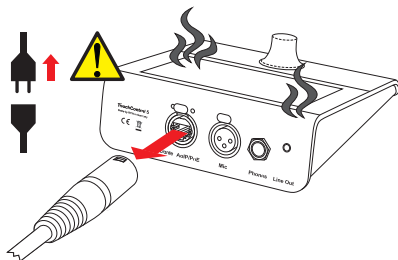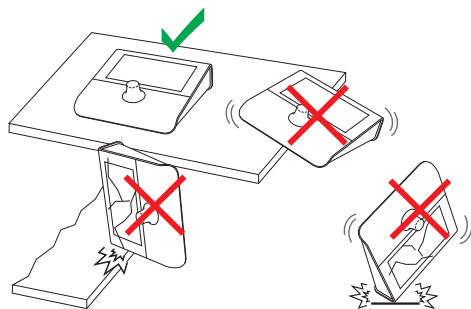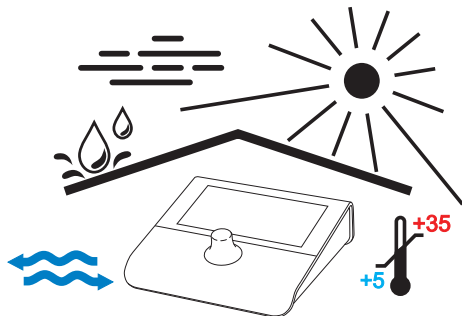

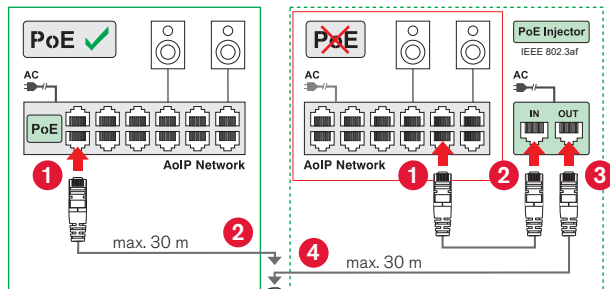




Accessory | Zubehör

14554-xx Ethernet Power Injector



etherCON NE8MX-6-T/NE8MX6
+ wired CAT-7 S/FTP shield

TouchControl 5 is certified with CAT 7 cables, but CAT 5E, CAT 6 or CAT 7 can be used. Maximum cable length: 30 m

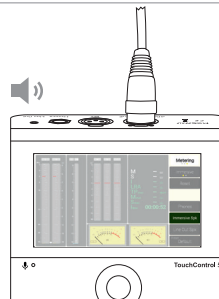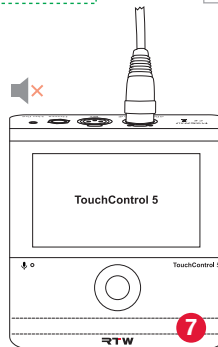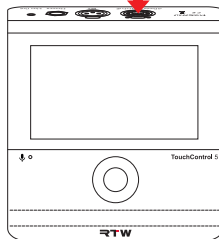

320517ND: Dante Page | Seite 5 - 6

320518ND: RAVENNA Page | Seite 6 - 7

Integrate With Dante Controller™ | Mit Dante Controller™ einbinden

EN: Model **320517ND**: Choose **Transmitter** sources and assign them to the TouchControl 5 **input channels**. |

DE: Modell **320517ND**: **Sender**-Quellen auswählen und den TouchControl-5-**Eingangskanälen** zuordnen.





The screenshot shows the Dante Controller interface with the 'Receivers' list on the left. The 'RTW-TC5-1ea7d6' receiver is selected and highlighted with a red box. A red box labeled 'TouchControl 5 Inputs' is also present. The 'Transmitters' list on the right shows 'Digiface-164bcc' and 'RTW-TC5-1ea7d6' as sources. A mouse cursor is pointing at the 'RTW-TC5-1ea7d6' source, indicating it is being assigned to the input channels.

EN: Choose TouchControl 5 **output channels** and assign them to the **Receiver** devices (e. g. loudspeakers). |

DE: TouchControl-5-**Ausgangskanäle** auswählen und den **Empfänger**-Geräten zuordnen (z. B. Lautsprecher).

The screenshot shows the Dante Controller interface with the 'Receivers' list on the left. The 'RTW-TC5-1ea7d6' receiver is selected and highlighted with a red box. A red box labeled 'TouchControl 5 Outputs' is also present. The 'Transmitters' list on the right shows 'Digiface-164bcc' and 'RTW-TC5-1ea7d6' as sources. A mouse cursor is pointing at the 'RTW-TC5-1ea7d6' source, indicating it is being assigned to the output channels.

Find IP Address | IP-Adresse finden

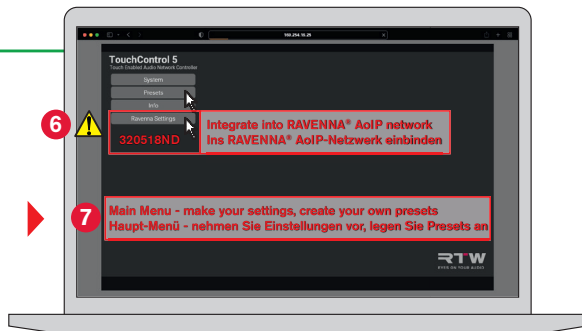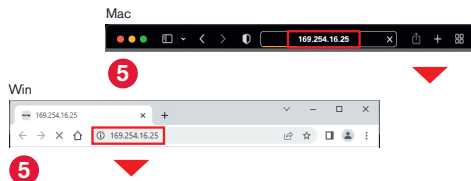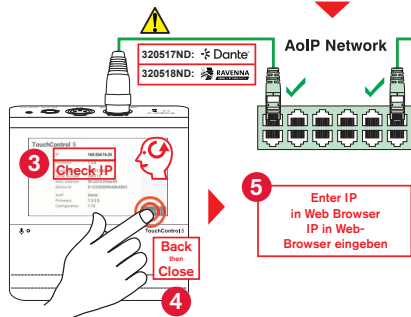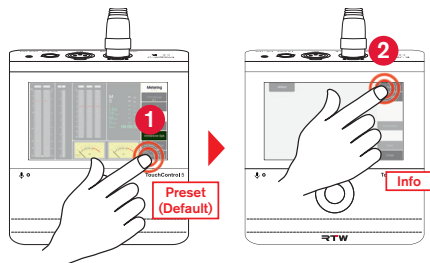

Integrate Into RAVENNA® | In RAVENNA® einbinden

EN: Model **320518ND**: Choose **Session sources** tab and assign the TouchControl 5 **Output channels**. |

DE: Modell **320518ND**: **Session sources**-Reiter auswählen und TouchControl-5-**Ausgangskanäle** zuordnen.

RAVENNA
AES67

General settings | PTP | **Session sources** | Session sinks | Ins/Outs | NMOS | System

1 ALSA (on rtw-ic5)_1

Configuration

Enabled ☒
IO Audio Device
Name ALSA (on rtw-ic5)_1
Description

Output Interface(s) Interface 1
Auto-unicast ☐ retrieve unicast address+port from sink (RTSP)
Address 239.1.23.144
Address sec

TTL 15
Payload Type 98
Codec L24
Frame size (samples) 48
DSCP 34 (AF41)
RefClock PTP traceable ☐

Channel count 8
Channels ALSA Output 1 - ALSA Output

The URL of the SDP of this session is <http://169.254.23.144:9090/by-id/1>

TouchControl 5 Outputs

EN: Choose **Session sinks** tab and assign **Input channels** to the TouchControl 5. |

DE: **Session sinks**-Reiter auswählen und **Eingangskanäle** dem TouchControl 5 zuordnen.

RAVENNA
AES67

General settings | PTP | Session sources | **Session sinks** | Ins/Outs | NMOS | System

DirectOut 1

Configuration

Enabled ☒
IO Audio Device
Label
Description

Source DirectOut 1
Delay (samples) 0
Ignore refclk GMID ☒ accept source locked to any PTP Master
Ignore refclk Domain ☐ accept source locked from any PTP Domain
Relaxed check ☐ accept source with lower channel count

Channel count 8
Count adapted ☐
Channels ALSA Input 1 - ALSA Input 8

TouchControl 5 Inputs

EN:
Quick Start Guide for

RTW TouchControl 5

Model 320517ND for Dante® AoIP networks
Model 320518ND for Ravenna AoIP networks

© **RTW** April 2025 | Changes without prior notice!
RTW GmbH & Co. KG
Am Wassermann 25 | 50829 Koeln (Cologne) | Germany
Phone +49 221. 70 913-0
sales@rtw.com | www.rtw.com

ATTENTION - This quick start guide provides an overview of the steps required to get your TouchControl 5 up and running as quickly as possible.

The detailed operating manual, more documentation and the latest software is available for download at the RTW website (Support > Manuals & Software Downloads > Monitor Control > TouchControl 5).

DE:
Schnellstart-Anleitung für

RTW TouchControl 5

Model 220517ND für Dante® AoIP-Netzwerke
Model 220518ND für Ravenna AoIP-Netzwerke

© **RTW** 04/2025 | Änderungen vorbehalten!
RTW GmbH & Co. KG
Am Wassermann 25 | 50829 Köln | Germany
Phone +49 221. 70 913-0
sales@rtw.com | www.rtw.com

ACHTUNG - Diese Schnellstart-Anleitung gibt Ihnen einen ersten Überblick über die Schritte zur schnellen Inbetriebnahme Ihres TouchControl 5.

Das ausführliche Benutzerhandbuch, weitere Dokumentationen und die neueste Software stehen auf der RTW-Webseite (Support > Manuals & Software Downloads > Monitor Control > TouchControl 5) zum Download bereit.

RTW GmbH & Co. KG
Am Wassermann 25 | 50829 Koeln (Cologne) | Germany
Phone: +49 221. 70 913-0
Internet: www.rtw.com | E-Mail: sales@rtw.com

RTW
EYES ON YOUR AUDIO